

## HINGE ADJUSTMENTS

St Michel use clip hinges which require only light finger pressure to clip into place and allow the doors to be easily removed for access to plumbing fittings.

### DOOR ALIGNMENT

Your doors have been adjusted in the factory on a level surface to achieve matching height, equal gap and surface alignment. Before you adjust the doors, ensure again that the vanity is level and true and not twisted. When level, if the doors still do not align, adjustment can be made to the hinges as follows:

#### A. SIDE ADJUSTMENT

To move the doors sideways in total or to level each door, turn screw **A** clockwise or anticlockwise.

#### B. DEPTH ADJUSTMENT

To move the door inward or outward from the carcass - loosen the hinge arm fastening screw **B** and slide in the direction you want to go. Retighten hinge arm fastening screw **B**.

#### C. HEIGHT ADJUSTMENT

Loosen the top and the bottom screw **C** on each mount plate, adjust and retighten.

