

9. DOOR INSTALLATION & ALIGNMENT



Fig. 9A Softclose hinge

9.1 Removing & installing doors



Fig. 9B Unclip hinge

- 1 Support the weight of the door
- 2 To remove door start with top hinge and work your way down.
- 3 To unclip hinge apply light pressure to the clip at the back of the hinge and pull forward (Fig. 9B)
- 4 To install doors align the hinge mount and press back of hinge into place and listen for click

9.2 Hinge Adjustment

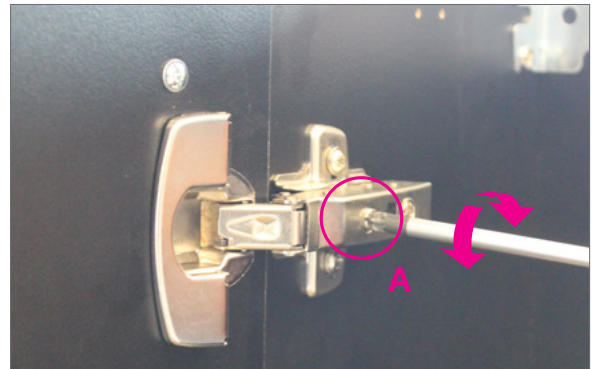


Fig. 9C Side adjustment

To move doors sideways or to level each door - turn screw **A** Clockwise or Anti Clockwise. (Fig. 9C)

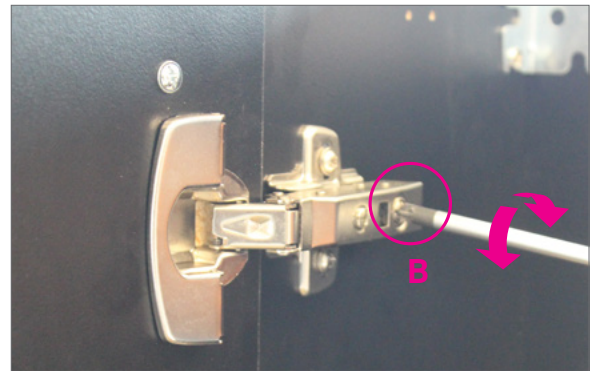


Fig. 9D Depth adjustment

To move the door inward or outward from the carcass - turn screw **B** Clockwise or Anti Clockwise (Fig. 9D)

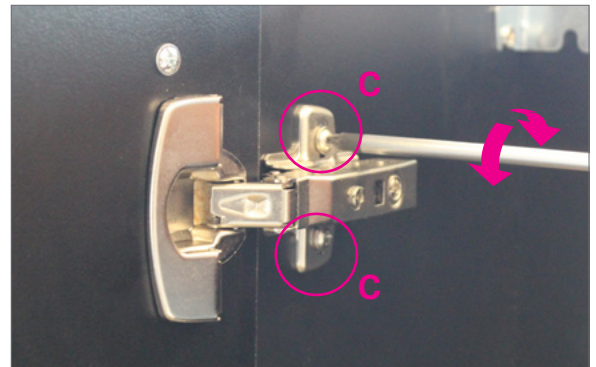


Fig. 9E Height adjustment

Loosen the top and bottom screw **C** on each mount plate, adjust door height by moving door up or down, then retighten **C** screws (Fig. 9E)