


# Wall Fixing Cabinet & Basin

PLEASE NOTE: With wall hung vanities, we suggest you adjust the measurements to suit your individual height preference



Back panel is dropped 110mm to fit Dusk/Dawn basin

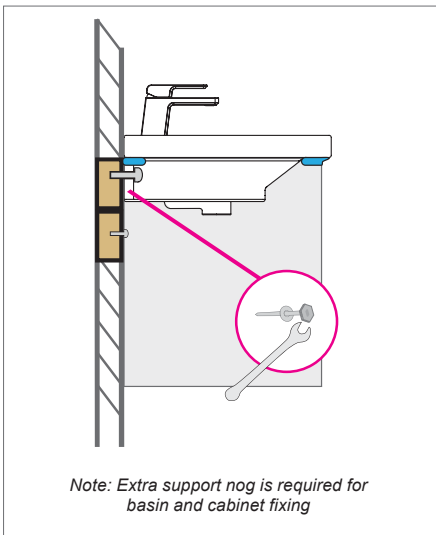

*Note: Extra support nog is required for basin and cabinet fixing*

Position the top so that it has an equal amount of overhang on each side and use a level to ensure the vanity top surface is level. Note: If the vanity is being installed in a corner, a packing strip is required and basin location will vary.

1. Apply Silicone Sealant (not included) to all four corners of the cabinet
2. Place the vanity top/basin onto the cabinet
2. If installing a basin with bolt fixings - ensure basin is fixed into nogs with supplied fixings as well as using a silicone sealant to the top of the cabinet.