



1

Install cabinet onto wall as per Installation Guide Booklet supplied with your cabinet.

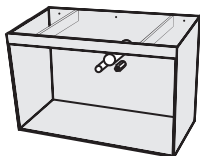


2

Knock supplied timber dowels into holes on the bottom of the Cherry Pie components. Note: 4x dowels per Cherry Pie piece supplied.

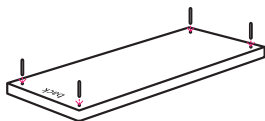


3

The Cherry Pie piece has an orientation so place edge with "BACK" sticker to rear of cabinet with sticker facing down. You will also see that the front edge has radiused edges and corners.

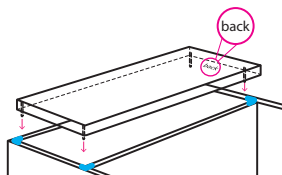


4

Fit Cherry Pie top to cabinet with adhesive. Dowels locate inbetween the sides and the divider. Check that the word 'back' is facing down & towards the back of the cabinet. The dowels are offset to allow for an overhang at the front and the side of the cabinet.

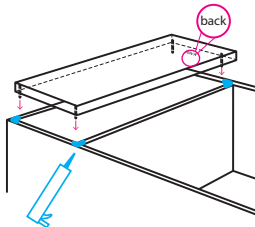

5

Using adhesive, secure basin to cherry pie top along the left and right under side of the basin. Seal to finish as per the Installation Guide.

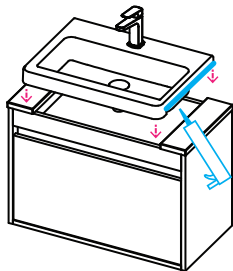

6

Note: Basin sits on top of Cherry Pie not in between.

