



# HANDLE TEMPLATE

## London Mirror Cabinet

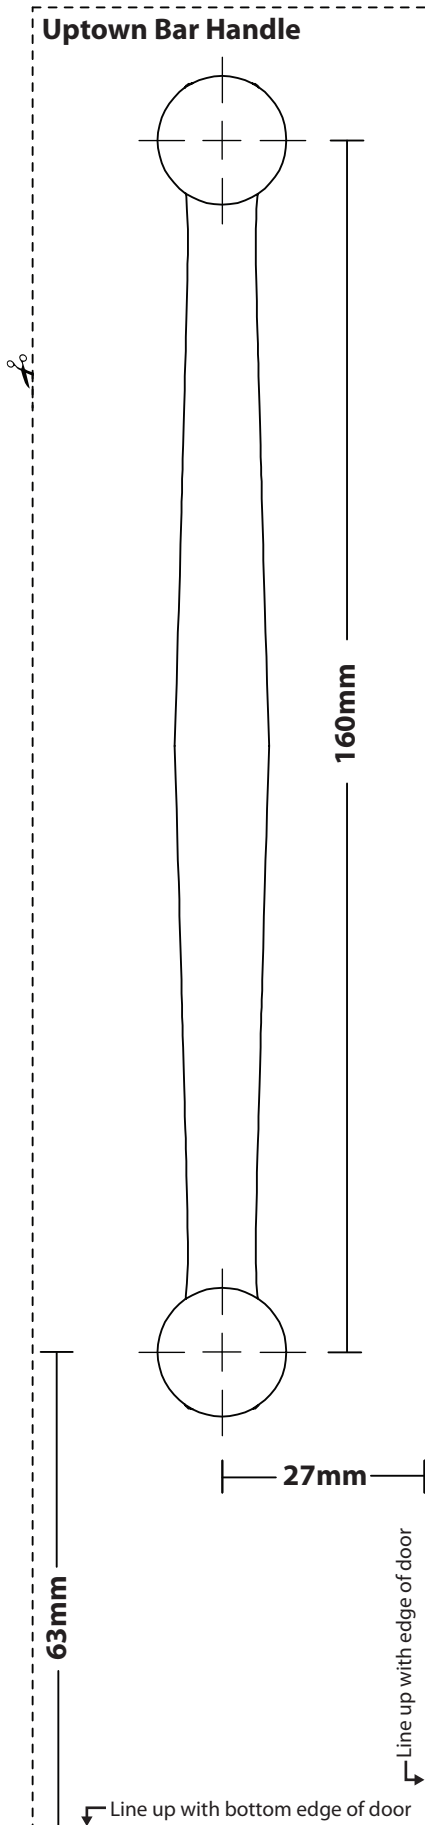

1

Cut out selected handle template and place on door as per recommended drawing (dotted lines are indicative only - measurement prior to drilling is advised)

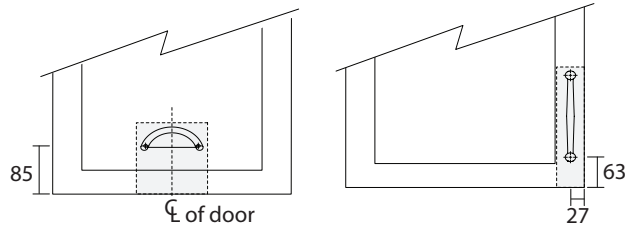

NB: IF you choose a different handle location, ensure the minimum clearance for the screw hole from outer edge of door is **25mm**

2

Secure the template in place with masking tape

3

Use a 4.5-5mm drill bit to drill screw hole. Drill from the front face through to the back

4

Screw Handle into place with screws provided

NB: If drilling through the frame use 24mm screw. If drilling through the centre panel use 18mm screw

