


STAINLESS SHROUD INSTALLATION INSTRUCTIONS

(AS SEEN ON BLISS FURNITURE)


LEVEL CABINET

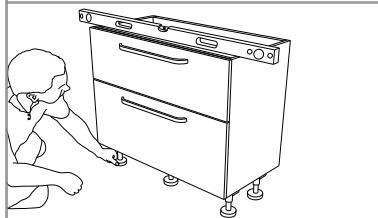

Ensure that the adjustable legs are pre-set at 150mm before installation begins. Measurements are taken from the underside of the cabinet to the floor.


Level the cabinet by adjusting the four corner legs and ensure that the minimum height from the underside of the cabinet to the floor is no less than 150mm. Turn the foot clockwise to increase height.

ADJUST LEG

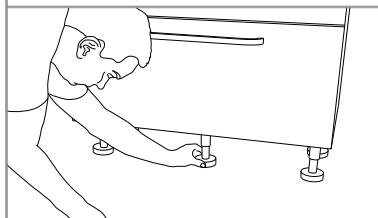


When the cabinet is level unwind the middle leg clockwise until it touches the floor.

EXPOSE ADHESIVE

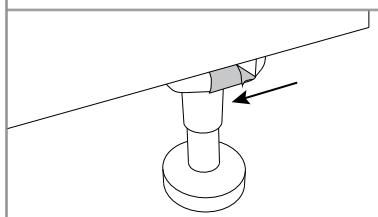


Prepare double sided tape, located on the rear left and right legs, by peeling the protective layer off and exposing the adhesive.

INSTALLING SHROUD

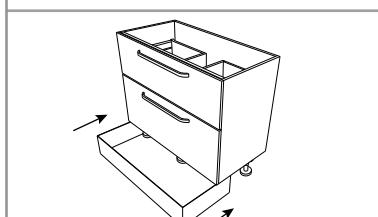


Slide the stainless steel shroud into place. Push until the front of the shroud sits firm against the front legs and the back of the shroud is flush with the back of the cabinet.

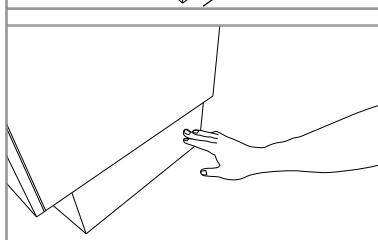

When it is in place, push the back left and right ends of the shroud against the double sided tape located on the rear legs.
The tape will help hold the shroud in place while being siliconed to the floor.

SILICONE FINISH

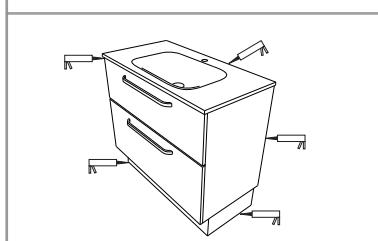

Apply silicone to the top edges of the cabinet and ensure that the unfinished/raw edge of the cabinet sides, front support rail and back are sealed before the top is positioned. Attach the basin to the top of the cabinet with a continuous bead of silicone and then proceed to silicone all the cabinet and shroud edges that are in contact with the wall and floor.

A Note on Silicone: Only use silicone especially formulated for bathroom use—we suggest a clear silicone or a colour matched to floor to ensure the reflective qualities of the stainless are not compromised by using a contrasting colour. Ensure silicone is used according to manufacturer's instructions.