



FLAT BAR TOWEL RAIL INSTALLATION INSTRUCTIONS

DRILL HOLE POSITIONS

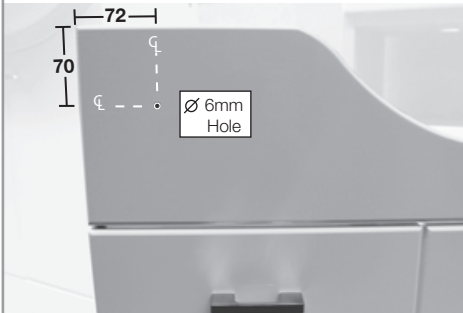


To ensure an easy installation of a towel rail, complete installation before situating the basin.
To prevent any "twisting" of the rail, the Flat Bar towel rail needs to be installed to the given measurements.

The front drill hole is placed 72mm across from the vanitys side and 70mm down from the top .

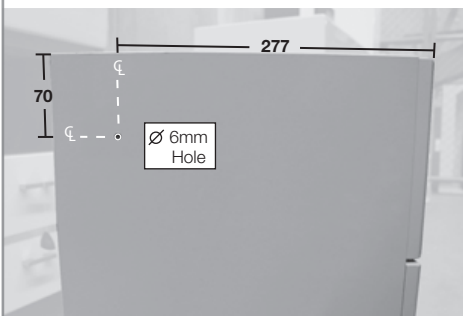

The side drill hole is placed 277mm across from the front of the vanity and 70mm down from the top.

WASHERS

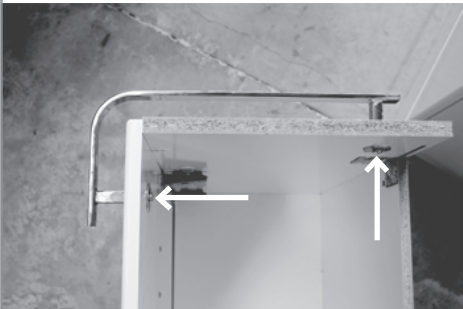

When attaching the towel rail from the inside of the vanity, be sure to use the screws and washers provided.