



st.michel
BATHROOMWARE



Mirror Installation Instructions, Important Care & Maintenance, Warranty

Thank you for purchasing this St Michel product. Please read all care instructions. By following these instructions, you will maintain your St Michel product for many years to come and protect

SECTION	PAGE
INSTALLATION INSTRUCTIONS/ Mirror Cabinets	2-3
DOOR INSTALLATION & ALIGNMENT	4
CARE & MAINTENANCE GUIDE	5
WARRANTY	6-8



STOP


STOP. Are you installing this product?

Please READ the installation instructions in this booklet BEFORE INSTALLATION.


Otherwise if the product is not installed in accordance with this instruction, the St Michel warranty may be void and the homeowner may claim against YOU (the installer)

RETURN TO HOMEOWNER - important warranty information inside.
For more info visit stmichel.co.nz

Mirror Cabinet Installation

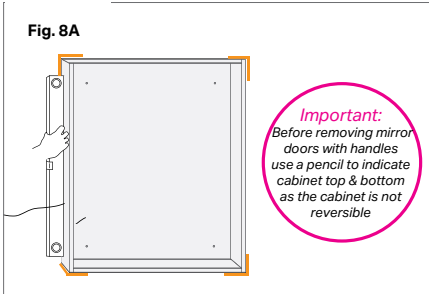


- Place cabinet on a flat surface to remove all doors. Keep mirror doors in a safe area where they will not get damaged.
- Position cabinet on the wall at the desired height, ensure cabinet is level and mark the four corners on the wall. (Note: doors may overhang the top and/or bottom and/or sides of the cabinet - consider this when positioning its height / width)

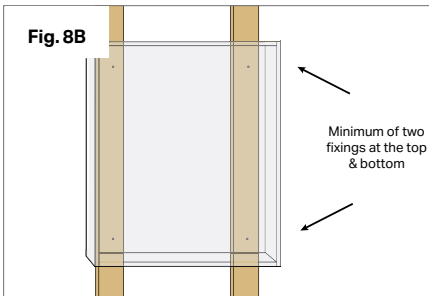


- Securely fasten cabinet to the wall through the back, ensure the fixings (screws supplied) will be into studs on each side of the cabinet as close to the top and bottom corners as possible. If this is not possible then use the rawl plugs supplied.

Recessing your mirror cabinet

- Place cabinet on a flat surface to remove all doors
- Position cabinet on the wall at the desired height, ensure cabinet is level and mark the four corners on the wall. (Note: doors may overhang the top and/or bottom of the cabinet - consider this when positioning its height)
- Cut a hole 4mm bigger than the cabinet carcass (**Fig. 8C**)
- Make sure the hole has sufficient noggings to fix top and bottom (note side fixing may not be achievable due to internal division)

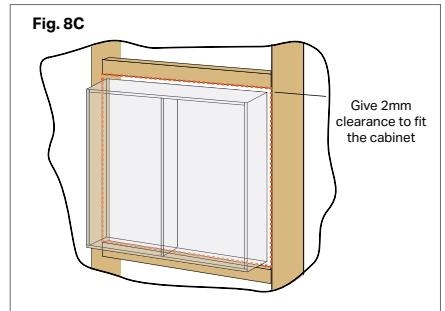

- You need to make sure the cabinet protrudes by 20mm to allow for finger pull on the door (**Fig. 8D**)
- Note: If a light is installed make sure you have enough room for fixing on top of cabinet and clearance with the door
- Seal or architrave the edges to finish


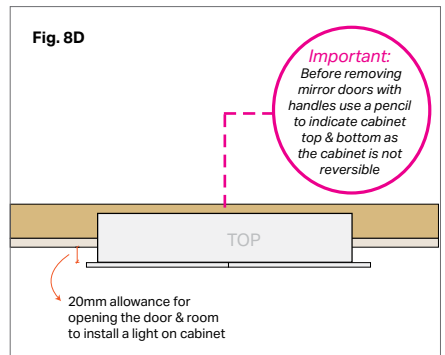


Adjustment

NOTE

The fitting & adjustment of the doors is the responsibility of THE INSTALLER
Please refer to **Page 4** for adjustment instructions

- If the mirror cabinet has been supplied with shelves. Place them back into the cabinet, ensure the shelves are fitted into the shelf supports correctly.
- Install doors back into position and adjust - refer to **Page 4** for door hinge adjustment.
- Note: If you are installing a light with your mirror make sure you consult with your electrician first.

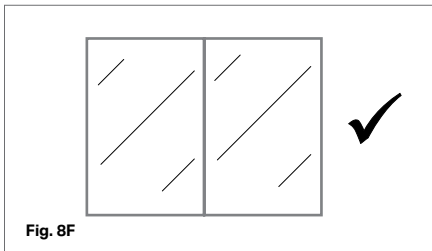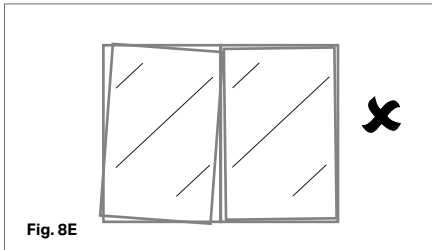

DOOR INSTALLATION & ALIGNMENT

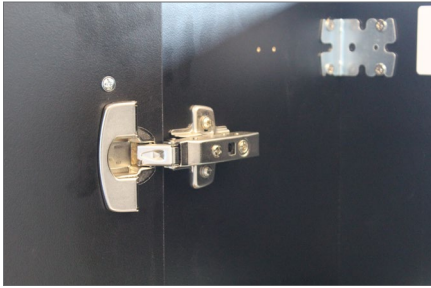


Fig. 9A Softclose hinge

Removing & installing doors



Fig. 9B Unclip hinge

- 1 Support the weight of the door
- 2 To remove door start with top hinge and work your way down.
- 3 To unclip hinge apply light pressure to the clip at the back of the hinge and pull forward (**Fig. 9B**)
- 4 To install doors align the hinge mount and press back of hinge into place and listen for click.

Hinge Adjustment

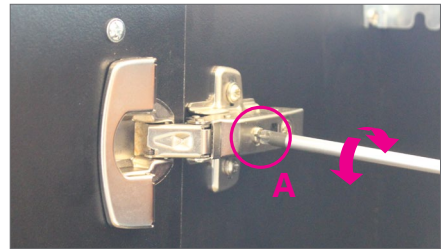


Fig. 9C Side adjustment

To move doors sideways or to level each door - turn screw **A** Clockwise or Anti Clockwise. (**Fig. 9C**)

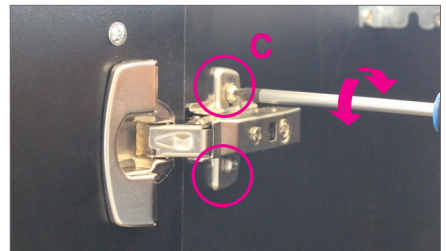


Fig. 9D Depth adjustment

To move the door inward or outward from the carcass - turn screw **B** Clockwise or Anti Clockwise (**Fig. 9D**)

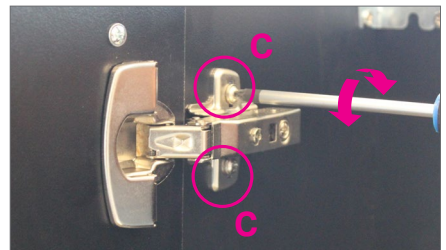


Fig. 9E Height adjustment

Loosen the top and bottom screw **C** on each mount plate, adjust door height by moving door up or down, then retighten **C** screws (**Fig. 9E**)



Mirrors

Do not use ammonia-based cleaning products such as glass cleaner - These may erode the mirrors silver backing. Be sure to read the label of any such cleaning products before use. Always spray cleaning products onto a cleaning cloth not directly onto the mirror.

For best results use a slightly moistened microfibre cloth to remove dry dirt or grime, then buff clean with dry microfibre cloth or use a soft dry cloth with a tight weave (soft and nonabrasive) This will leave you with a clean, smear free finish. By using alkaline (ammonia) or acid (vinegar) based products you risk damaging the silvered backing of the mirror causing 'black edge'.

Protection against 'black-spotting'.

Alkaline, acid and moisture elements can cause the silvered backing of a mirror to darken, this is usually referred to as 'black-spotting'. The best way to protect your mirror against black spotting is to keep your mirror dry. After use wipe off any water, moisture or steam. If moisture is allowed to collect on the edges 'black edge' will result over time.

WARRANTY

Unless otherwise stated warranties for St Michel products are as follows:

TABLE: St Michel Warranties

Category	Sub Category	Residential Warranty*	Commercial Warranty*	St Michel Outlet Store or ex-display
Mirror Cabinets	Mirror Cabinets	2 Years	1 Year	1 Year
Mirror & Lights	Mirror Only	2 Years	1 Year	1 Year
	LED Mirrors	2 Years	1 Year	1 Year

* *Residential Warranty* applies to any St Michel products being utilised in a normal domestic capacity

* *Commercial Warranty* applies to any St Michel products installed in a commercial situation. Commercial situations are defined as public washrooms, public buildings, schools, sports centres, gymnasiums, hospitals, motels, hotels and retirement villages

WARRANTY

What is covered

Subject to conditions of use. We warrant our products to be free of substantial defects in materials and workmanship for the warranty period above, from the original date of purchase. This is in addition to the conditions and guarantees of the Consumer Guarantees Act (1993)

In the event of a substantial defect in materials or workmanship, we will, at our sole discretion, repair or replace the defective product or provide a refund up to the original purchase price of the product.

What is not covered by this warranty

1. Defects resulting from use other than normal residential use, or resulting from the product not being used or cared for in accordance with the Care & Maintenance - **Page 5**
2. Defects that have been caused by accident, abuse, neglect or misuse including (but not limited to) any form of damage including water damage, basin defects caused by water temperature in excess of 55°C. Defects resulting from humidity or other environmental conditions or any Act of God
3. Defects caused by improper installation. The relevant St Michel installation instructions must have been strictly followed, and the product installed in accordance with the relevant building and plumbing codes and in a good tradesman like manner. We recommend that the product is installed by a Licensed Building Practitioner or Registered Plumber. Electrical installation must be carried out by a registered electrician.
4. Claims by the customer, or anyone claiming through the customer, for labour, material, or any other costs incurred in removed defective goods and refitting any replacement.
5. Noise or vibration that is normal for that particular product, e.g. drawer runner or hinge opening and closing sounds
6. Damage caused by overloaded drawers or shelves

Please be aware that in keeping with our policy of continuous improvement, St Michel reserves the right to change the specification in design and materials without notice and with no obligation to refit products or components as previously manufactured.

How to make a claim

If you wish to make a claim against your warranty, please do so by completing the online Warranty Service Request form by visiting our website www.stmichel.co.nz/resources/warranty-care

Once we receive your claim we will review it and may contact you for further information. Once we have assessed the claim and determined that it is the result of a defect covered by the warranty, we will arrange for the repair, replacement or refund that we determine to be the best solution.

Please also be aware that if once we visit the site to investigate or repair the product and find that it is not in fact a defect or product fault and therefore not covered by this warranty, that we may charge for the time and travel incurred.

INSTALLERS MAY BE LIABLE

Installers need to know that under the Consumer Guarantees Act (CGA) they are responsible for any product they supply AND/OR install.

If a Homeowner supplies a product which you believe is not up to the job, **you must say so.**

If a product or service, provided by you, fails any CGA guarantees, the Consumer can ask for the job to be fixed at no extra cost. If the repair takes more than a reasonable time to fix, the Consumer can arrange the repair and claim the cost from you, or cancel the job and refuse to pay for the work done.

ALSO if the work has caused other loss or damage, you may also be liable for consequential loss.

Always buy a recognised brand from a recognised merchant. WWW.PDANZ.ORG.NZ

Product no.
.....

Product Name:
.....

Date purchased:
.....

Purchased from:
.....
.....



2 Enterprise Drive, Henderson, Auckland 0612 | PO Box 21 122, Henderson, Auckland 0650

phone (09) 837 4276 email info@stmichel.co.nz **stmichel.co.nz**